



U3A
Armadale
Sound
System
Computer &
Projector
Setup

Dell Laptop Computer Setup (Computer usually kept by Phil for updates / maintenance.)

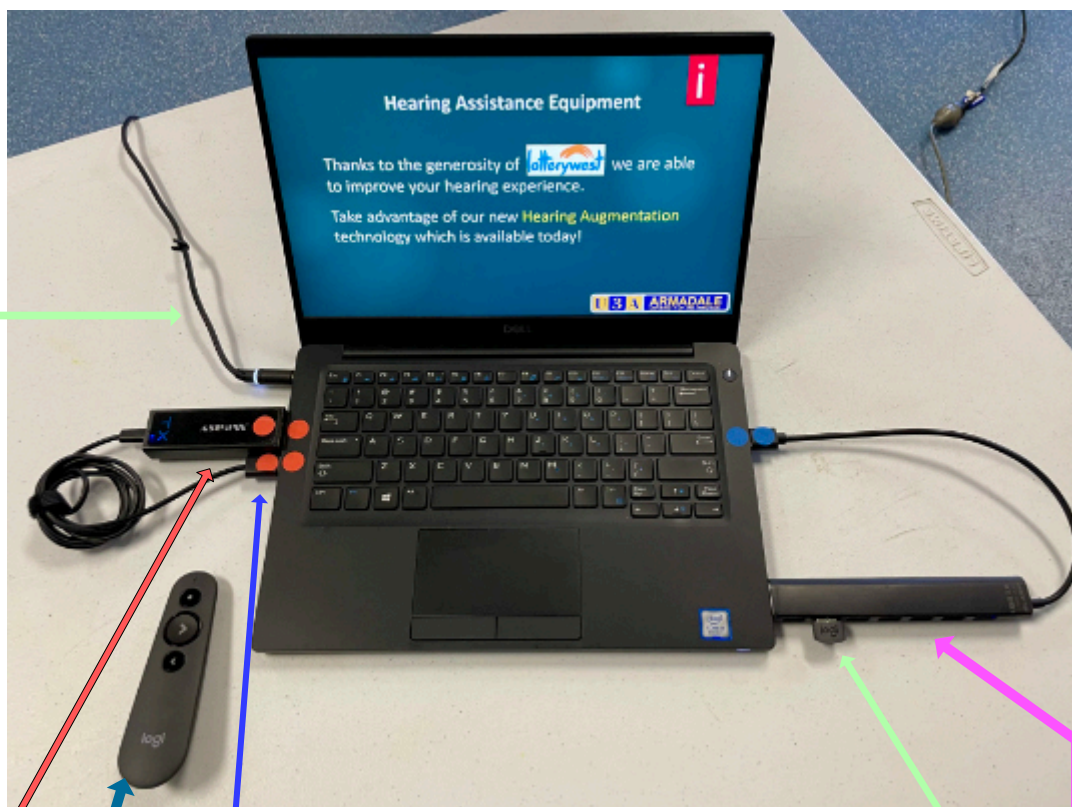

1. Wireless transmitter for projector - HDMI plug
2. Power for wireless transmitter - USB A plug
3. Power cable to computer
4. USB A extender - seven USB sockets
5. USB dongle for presenter wand
6. Presenters wand (if required)

Stowage Bag with Components

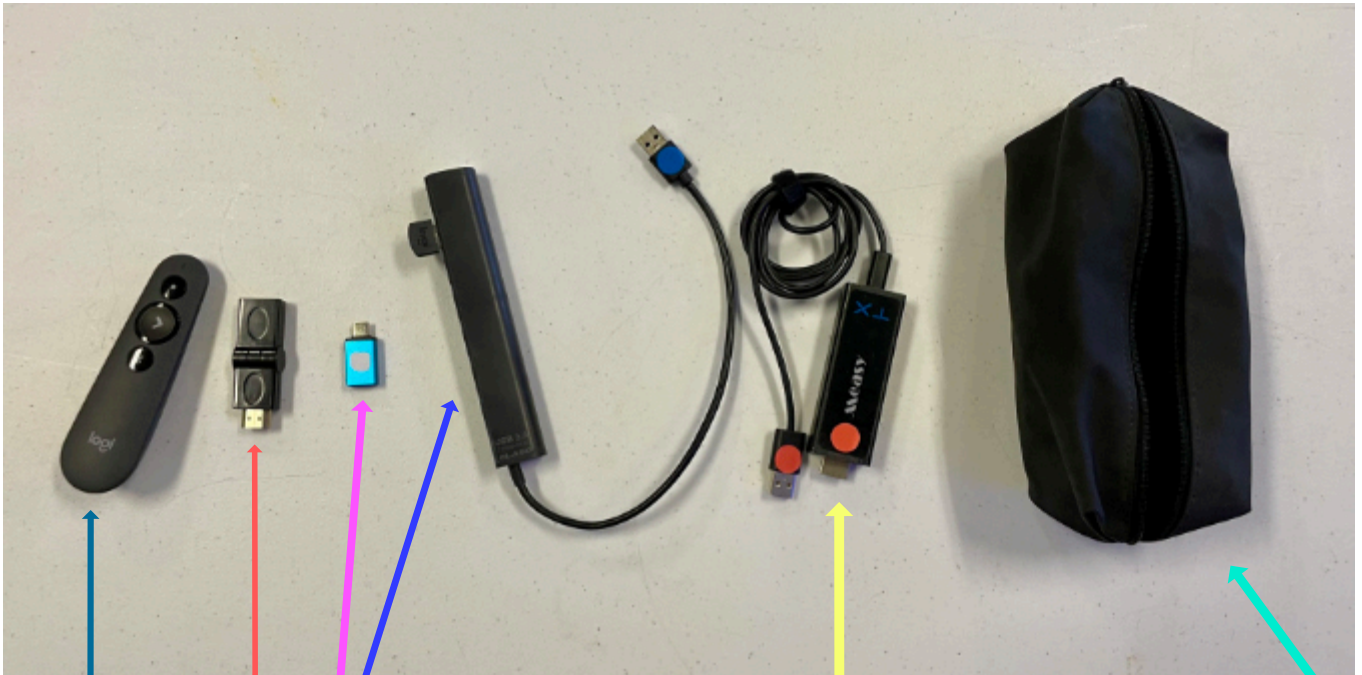

1. Presenters Wand (Large button = forward / Small button = backwards / Top button = Laser pointer).
2. HDMI Extender (If required to make space for USB C plugin)
3. USB A to USB C converter.
4. USB A Extender - Seven slots. Dongle works with Presenter pointer).
5. HDMI Transmitter with USB A power plug.
6. Bag.

Epson Projector on Trolley (please leave on trolley)



1. Projector on trolley. When plugged into mains BLUE light on top is lit. To switch on projector, press blue light again. Picture take 30 secs to warm up and be clear.
2. Make sure lens cover slide on front of projector is open.
3. Wireless receiver from laptop sender. This remains with projector and is always plugged in.

Projector With Screen



1. General setup of projector inline with screen.

Note yellow cable protector on cables once all items are set up.

Sound System Setup



1. Remove coiled cables from rear of speaker cover and plug into power.
2. After removing cover, assemble speaker stack with speaker at the top.
3. Plug in / switch on components on next page.


Rear of Amplifier

1. Sound Recorder (If Phil not there, disregard)


2. Presenter headset wireless receiver.

3. Hearing Augmentation Transmitter (This is left on top of amplifier but needs plugging in lower socket, right hand side)


4. Microphone receivers. Plug into top two sockets

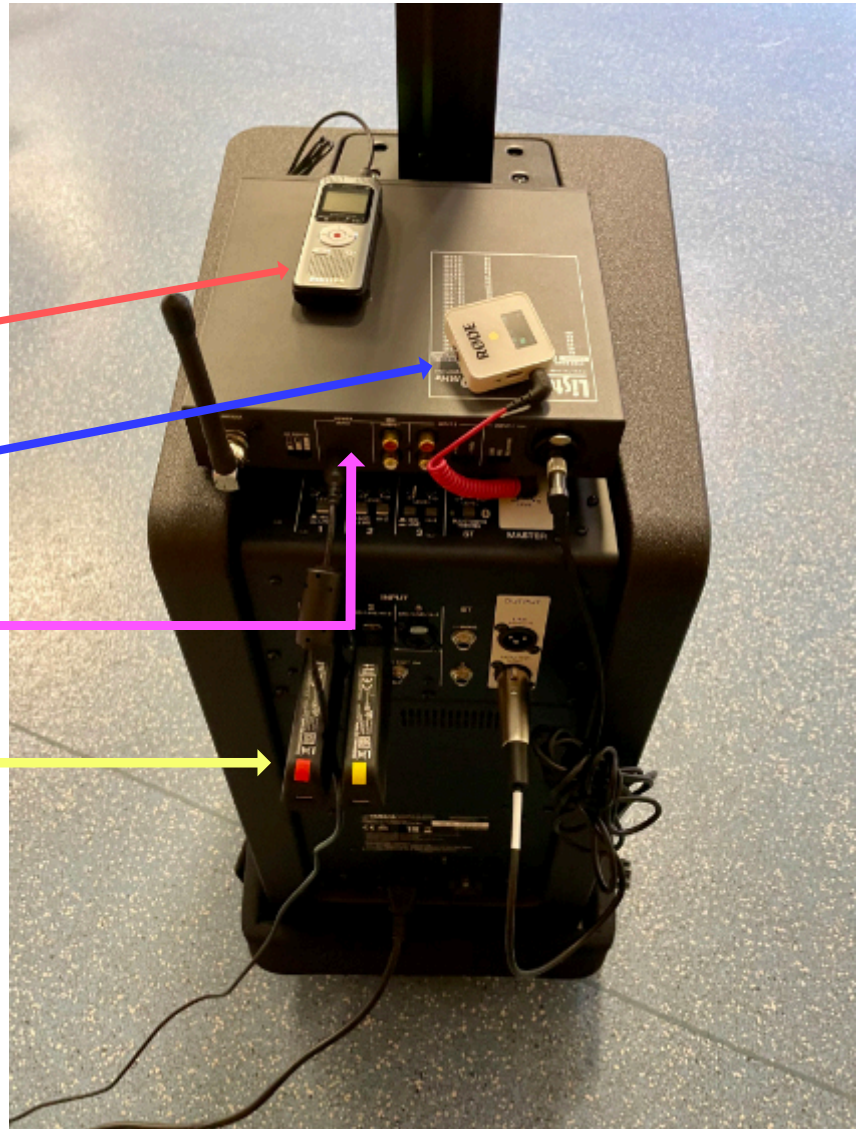

Sound System Setup

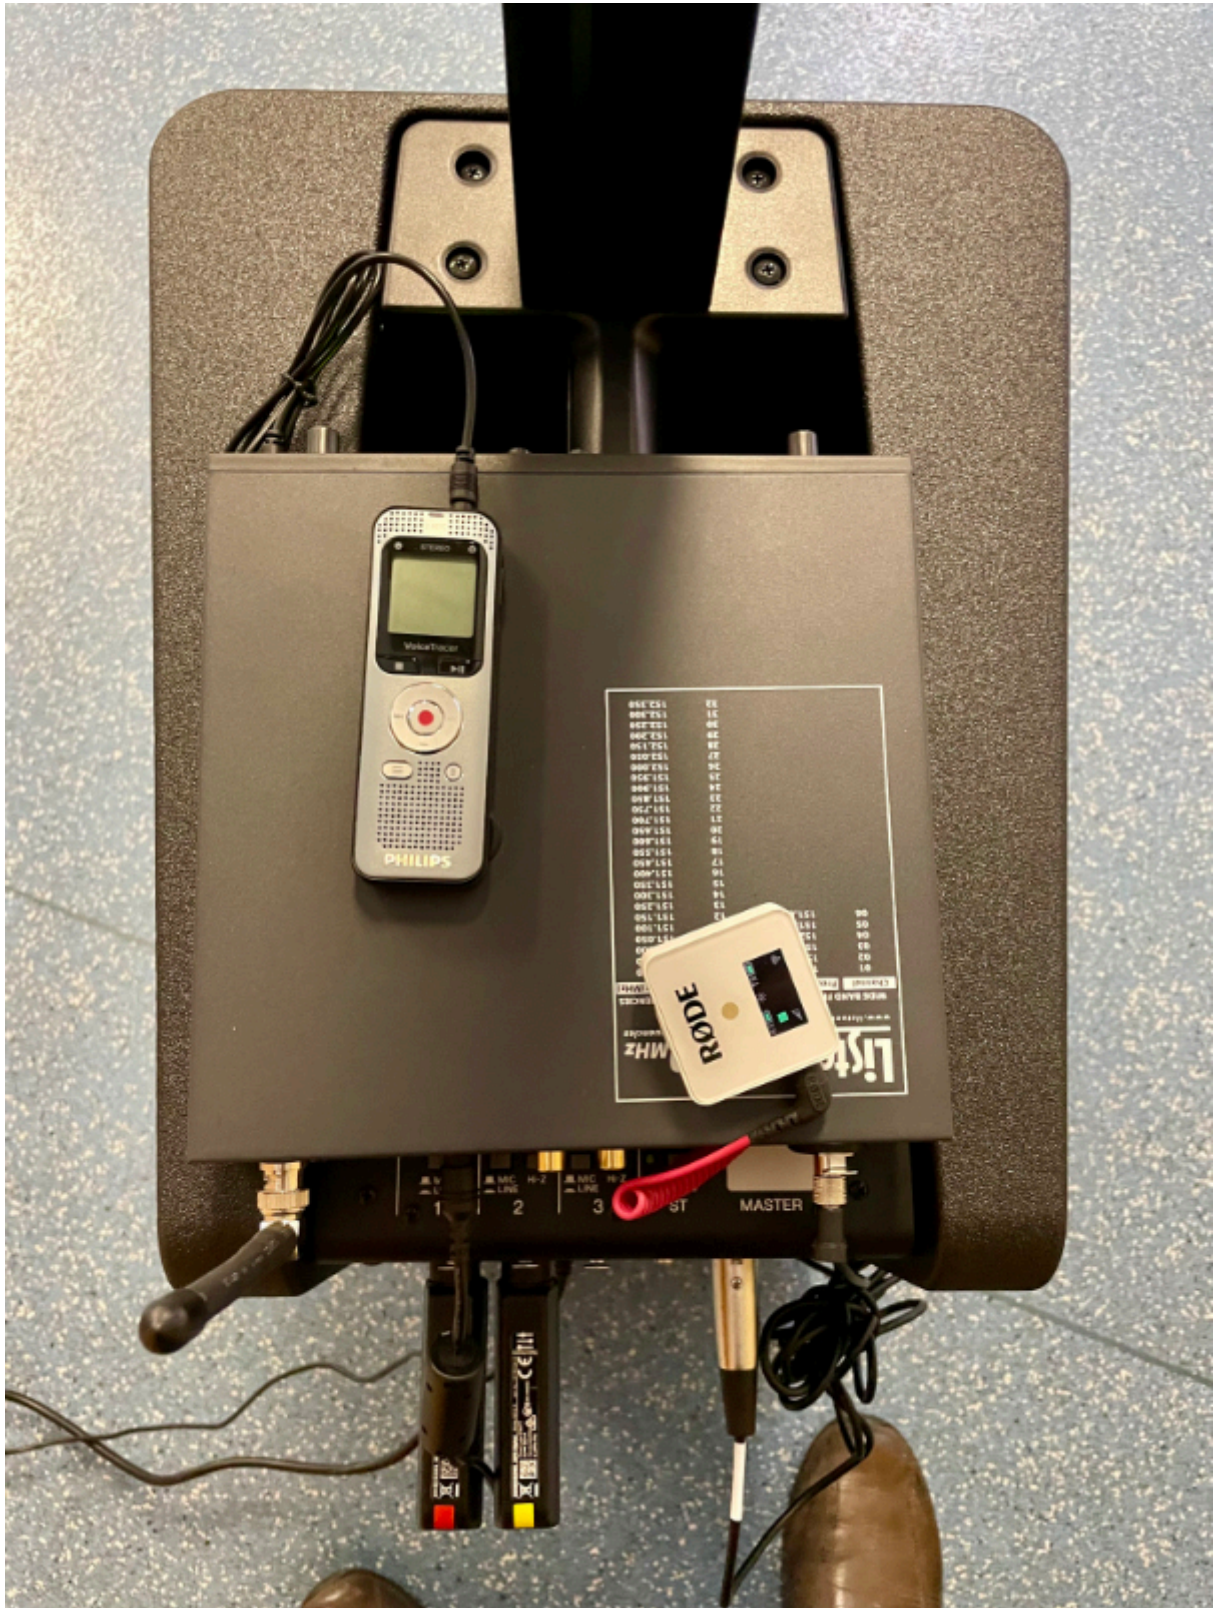

Microphones

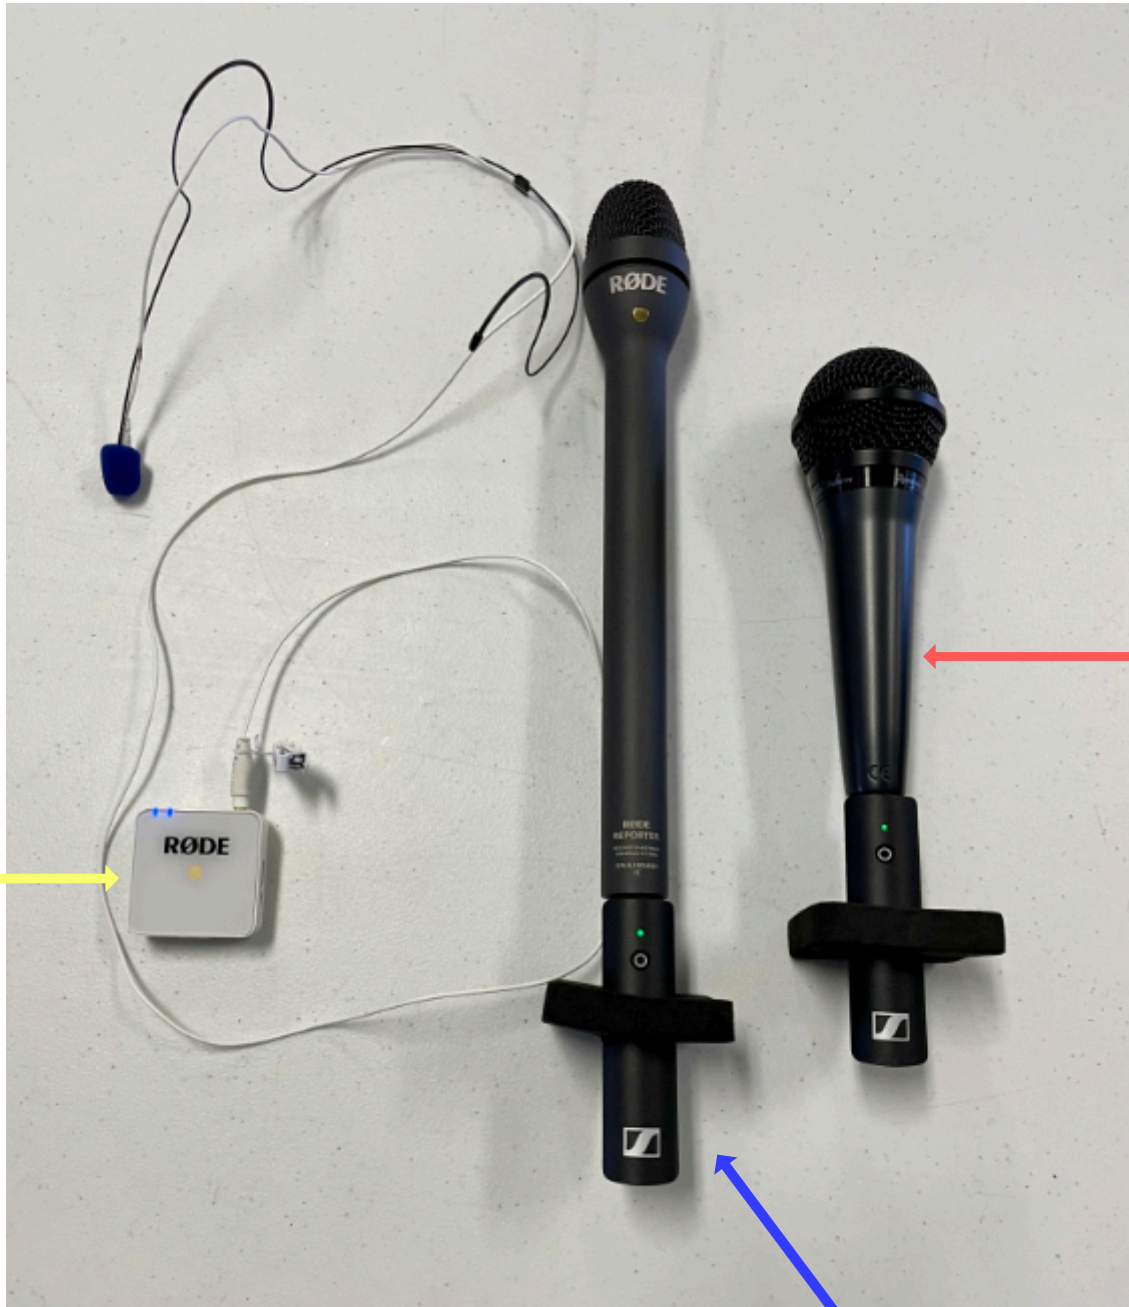

1. Presenter's headset plugged into Rode transmitter.
2. Question Time audience microphone complete with transmitter.
3. Presenters hand held microphone complete with transmitter.

NOTE: Microphone transmitters/receivers have to be "paired" before plugging in. Press the O button on the two "red" labelled Tx/Rx until they flash green. When SOLID green they are "paired". Repeat with "yellow" Tx/Rx.

RODE Tx/Rx do NOT need to be paired, just switch on when required, Presenter as per picture, the receiver has small led window and goes with amplifier (see previous picture)


Long and Short Microphone Stowage



Projector / Speaker System & Microphone Bag Stowage



Wireless Tx/Rx Stowed and Charging

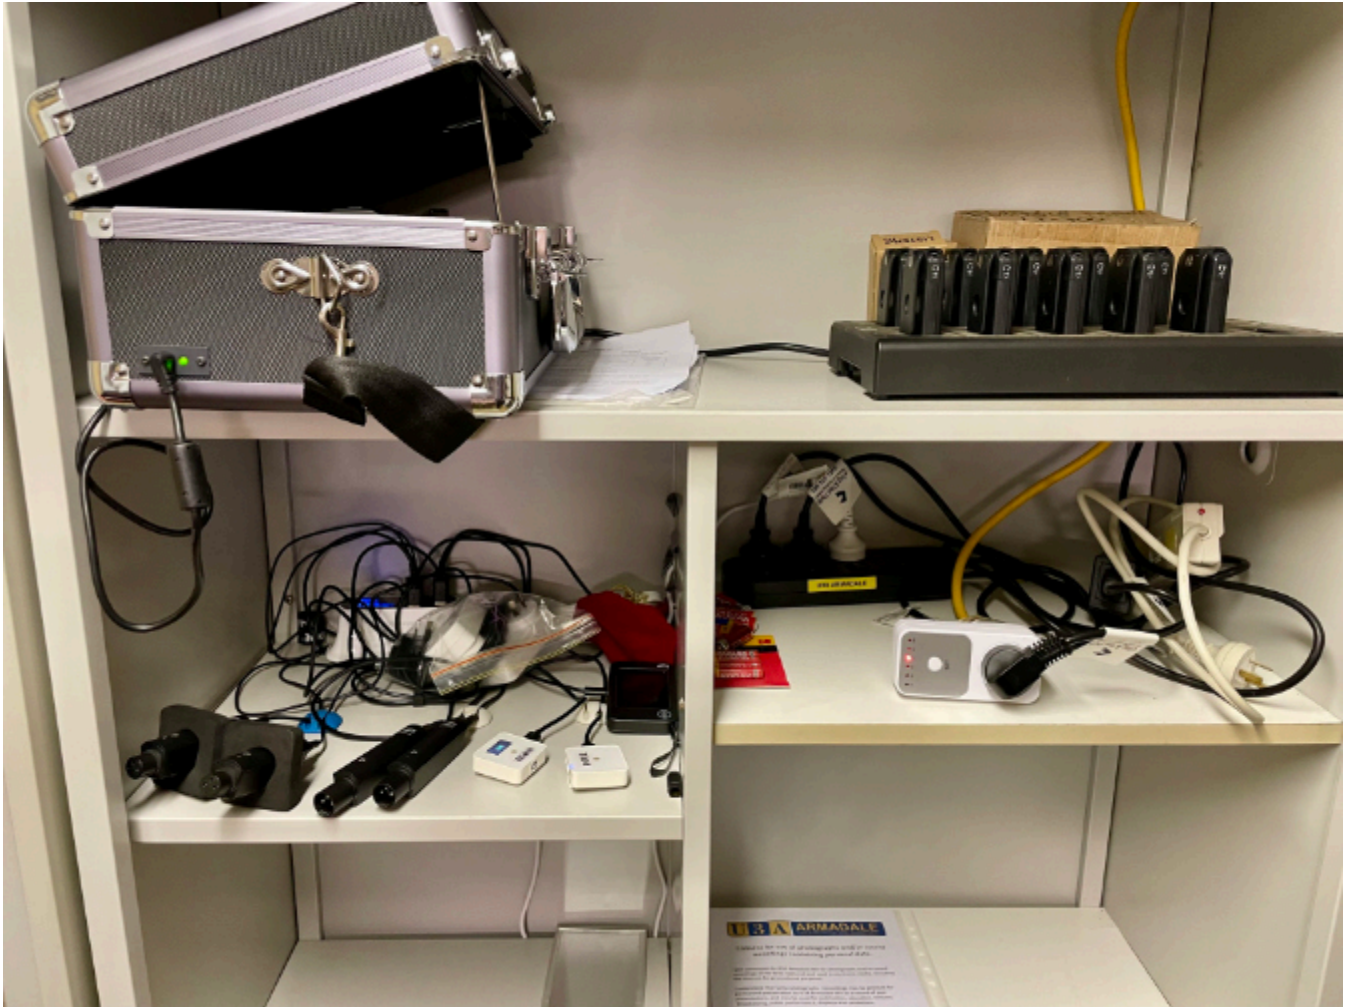

Don't Forget To Set Timer For Charging (6Hrs)

